
1900/27 Vibration Monitor

Bently Nevada™ Asset Condition Monitoring

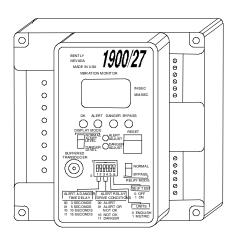

Description

The 1900/27 is a single-channel, stand-alone, locally mounted vibration monitor. It can be used as a stand-alone machinery protection device, suitable for general-purpose or some essential machinery and provides a built-in 4-20 mA interface for trending the monitored parameter in plant control and automation systems. The 1900/27 accepts a single transducer input from compatible Trendmaster® 2000 accelerometers, conditions the signal into peak velocity units, and provides local display and status indication as well as alarm relay contact outputs for connection to an external annunciator.

By using an optional Rack Buffered Output Transducer Interface Module (TIM), the 1900/27 can also be used in conjunction with our Trendmaster 2000 system. It allows the user to apply machinery protection capabilities to all (or selected) seismic vibration points of the Trendmaster 2000 system.

Note: If your application calls for connectivity to Bently Nevada's Trendmaster 2000 system, but does not require a 4-20 mA interface to other systems, consider the use of our 1900/25 monitor instead (consult part number 141485-01 for details).

Caution

If housing measurements are being made for overall protection of the machine, thought should be given to the usefulness of the measurement for each application. Most common machine malfunctions (imbalance, misalignment, etc.) originate at the rotor and cause an increase (or at least a change) in rotor vibration. In order for any housing measurement alone to be effective for overall machine protection, a significant amount of rotor vibration must be faithfully transmitted to the bearing housing or machine casing, or more specifically, to the mounting location of the transducer.

In addition, care should be exercised in the physical installation of the transducer. Improper installation can result in a decrease of the transducer amplitude and frequency response and/or the generation of signals, which do not represent actual machine vibration.

Upon request, we can provide engineering services to determine the appropriateness of housing measurements for the machine in question and/or to provide installation assistance.



Specifications and Ordering Information Part Number 141486-01 Rev. D (04/07)

		Signal Conditioning	
Specifications		Monitor Full-scale:	
Inputs		(Below 614Hz)	
Compatible		English Units:	
transducers		2.0 in/s zero-to-peak	
	Bently Nevada 200150 and 190520 Accelerometers.	Metric Units:	
Input Sensitivity		50.8 mm/s zero-to-peak	
Maximum acceleration	100 mv/g	Note: Full scale is limited by maximum input above 614 Hz. The maximum input is 2 volts peak, or 20 g peak. 20 g at 614 Hz is equivalent to 2 inch per second (the full scale range of the monitor). For frequencies above 614 Hz, Full scale is equal to (1228/frequency).	
Maximum	20 g peak	Frequency Response:	
differential input voltage		High pass corner frequency	
	4 volts peak to peak	-3 dB corner @ 8 Hz less than 1%	
Power AC/HDC Power		error due to high pass corner above 30 Hz	
Version		Low pass corner	
AC Voltage:		Greater than 4 kHz	
	85 to 264 Vac	less than 1% error due to low pass corner below 4kHz	
DC Voltage:		Accuracy	
	110 to 370 Vdc	Liquid Crystal	
Current Draw:	60 mA tun	Display and Buffered output.	
	60 mA. typ. 120 mA max.	30 Hz – 4 kHz:	
F	120 MA Mdx.	$\pm 3\%$ of full scale, Maximum	
Frequency:		8 Hz – 30 Hz	
1	47 Hz to 440 Hz, or DC.	-30% , + 3% of full scale	
Inrush:		4-20 mA Recorder.	
	20A typ. @ Vin=100Vac	30 Hz – 4 kHz:	
	40A typ. @ Vin=200Vac	±5% of full scale, Maximum	
+24 Vdc Power Version		8 Hz – 30 Hz	
Voltage:		-30% , + 5% of full scale	
vonage.	18 to 36 Vdc	Outputs	
Current Draw:		·	
Current Draw.	700 mA may	Buffered Transducer Output <i>Output Sensitivity:</i>	
	300 mA max.	19.7 mV/mm/s (500 mV/in/s)	

Specifications and Ordering Information Part Number 141486-01 Rev. D (04/07)

Displays Liquid Crystal		Relay Mode	LCD display.
	180,000 operations at 6 A, 120 Vac		Three positions: Normal, Alert Setpoint, and Danger Setpoint. Controls what is shown on the
Electrical:		Switch:	
Life Expectancy		Display Mode	
	Contact to Coil: 1500 Vrms	Controls	
	Contact to Contact: 750 Vrms		The other red LED indicates the monitor is in BYPASS mode.
Strength (at sea level):		BYPASS:	
Dielectric			relay is configured as nonlatching.)
	28 Vdc at 6 A		(Only occurs when the Danger
Current	300 Vac at 6 A		Hz indicates a Danger condition has occurred and gone away.
Maximum Voltage and			One of the two red LEDs indicate a Danger condition. Flashing at 2
Mauimum	180 watts, 1800 VA Maximum	Danger:	
Power:			configured as nonlatching.)
Switched			occurs when the Alert relay is
Contact Ratings	אוישול-µטופ, מטמטופ-נוווטש.		indicates an Alert condition has occurred and gone away. (Only
Туре	Single-pole, double-throw.		One yellow LED indicates an Aler condition. Flashing at 2 Hz
Relays		Alert:	
	Optical @ 1000 Vac or 707 Vdc		indicates monitor has been NOT OK, but is now OK.
Galvanic Isolatio			Constant OFF indicates NOT OK condition. OK LED flashing at 2 F
Accuracy:	Adjusted with trimpot		indicates OK condition of monito transducers, and field wiring.
	63.5 mm/s (2.5 in/s)		One constant ON green LED
Overrange:		LED Indicators OK:	
	50.8 mm/s (2 in/s)		
r un-scule Kunge.	20 mA @	Kenesn Kate.	0.8 s
4-20 mA Output Full-scale Range:		Refresh Rate:	50.8 mm/s (1.999 in/s)
(20 A O b b	50.8 mm/s (2 in/s) zero-to-peak	Full-scale:	50.0 mm /s /1.000 is /s)
Full-scale Range:			(2.0 inches wide x 0.9 inches hig
	500 Ω		50.8 mm wide x 22.8 mm high

	Two positions; controls whether monitor is in normal or BYPASS mode.	Fie The
Reset Button:		pro indi
	Push to reset latching relays and flashing LEDs.	Alaı
Configuration Switch		
	Used to set Alert and Danger Time Delay, Alert relay drive conditions, display units, and to initiate a monitor self-test.	Aler
Environmental	Limits	Alei
Operating Temperature:		
	-20°C to +70°C (-4°F to +158°F)	
Storage Temperature:		Unit
	-30°C to +90°C (-22°F to +194°F)	UIII
Relative Humidity:		
	To 95%, non-condensing	Mor
Hazardous Arec CSA/NRTL/C:	I Approvals	
	Class1, Division 2, Groups A, B, C, D T4 @ Ta=70 °C	Relo
Physical		
Dimensions		
Height x Width x Depth:		Nor
	132 mm x 132 mm x 71.1 mm	
	(5.20 in x 5.20 in x 2.80 in)	
Weight		Relo
	400 g (0.85 lb).	
Ordering In	formation	
1900/27-AXX		4-20
A: Power Supply Op	otion	
	01 85 - 264 Vac, 110 - 370 DC	

03

+24 Vdc

eld-programmable Options

These options are either field-changeable or programmed via internal jumpers. **Bold text** indicates options as shipped from the factory.

Alarm Time Delay	Option:
-	3 seconds
	5 seconds
	10 seconds
	15 seconds
Alert Relay Configu	uration Option:
	Alert relay
	Alert or NOT OK relay
	NOT OK relay
	Danger relay
Units Option:	
onico optioni	English
	Metric
Monitor Self-test C	ption:
	Off
	On
Relay Mode Option	:
	Normal
	BYPASS
Normal Relay State	e Option:
	Normally de-energized
	Normally energized
Relay Reset Option	:
	Latching
	Nonlatching
4-20 mA Output Be	havior Option:
	•

The 4-20 mA output can be set to clamp to 2 mA when the monitor is placed in BYPASS.

BYPASS 2 mA clamp enabled

BYPASS 2 mA clamp disabled

Specifications and Ordering Information Part Number 141486-01 Rev. D (04/07)

Accessories

200150 Accelerometer 200150-AXX

See Specification and Ordering Information sheet for transducer ordering information.

200152 Transducer Cable 200152 - AXX

A: Cable length option in metres.

15 15 ±0.15 metre (49.2 ±0.5 feet)

190100-01

Weatherproof enclosure for one 1900/27 Vibration Monitor.

When properly installed, the weatherproof enclosure will meet NEMA 4X watertight specifications.

Manual

190127-01

1900/27 Vibration Monitor operation and maintenance.

Rack Buffered Output Transducer Interface Module (TIM)

The 1900/27 Vibration Monitoring System can be used with our Trendmaster cost-effective, automated data collection and diagnostics system, via the Rack Buffered Output Transducer Interface Module (TIM).

Two connectors required for cable (line) connections are included with the TIM. The signal-input connector is a two-wire terminal strip. The signal input cable must be provided by user or ordered separately.

101281-01

Rack Buffered Output TIM

Graphs and Figures


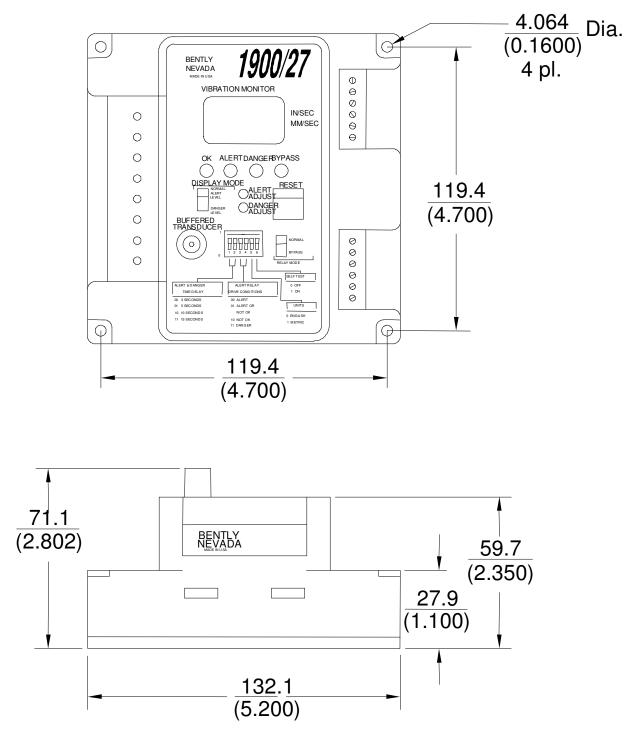


Figure 1: Typical field wiring diagram for the 1900/27 Vibration Monitoring System



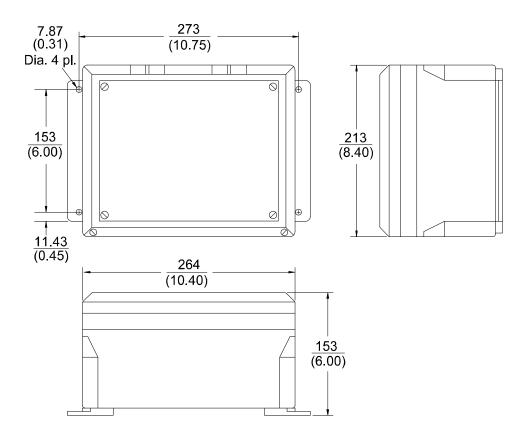

Copyright 1999. Bently Nevada LLC. 1631 Bently Parkway South, Minden, Nevada USA 89423 Phone: 775.782.3611 Fax: 775.215.2873 www.ge-energy.com/bently All rights reserved.

Bently Nevada and Trendmaster are trademarks of General Electric Company.